



BATTEN & FLAT BATTEN TECHNIQUES

Minimum Roof Slope: 3°

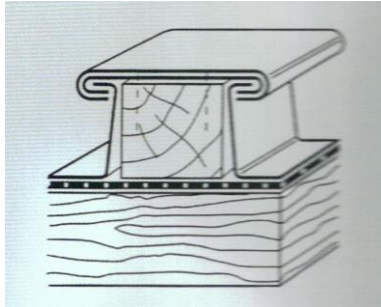

Traditional Batten System

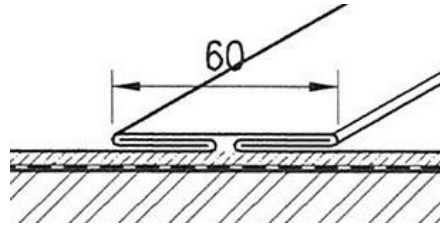

Flat Batten System

What is Batten Seam?

This is a traditional technique involving timber battens and capping strips. The metal sheets and long metal strips are held in place by a batten clip supporting the peripheral upstands.

The capping strips are placed in position by overlapping, thus ensuring that the roof is water tight. This technique creates an impression of strong, conspicuous contours and is often used for its shadow effects and urban character.

